


## 4.2. Service Life with a Preload Considered

When using an LM Guide under a moderate preload (clearance C0), it is necessary to calculate the service life while taking into account the magnitude of the preload.

To identify the appropriate preload for any selected LM Guide model, contact  .