

1.3. Accuracy Standards

The running straightness of Linear Pack model ER is indicated in table 5 (see Fig. 3).

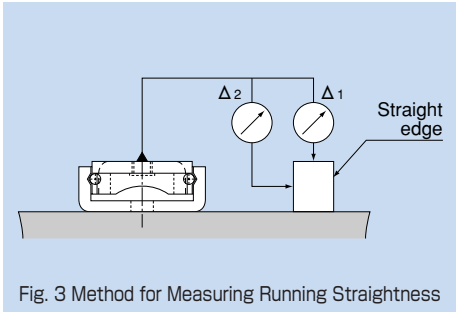


Fig. 3 Method for Measuring Running Straightness

Table 5 Running Straightness

Unit: mm

Stroke length		Running straightness of inner block in vertical directions $\Delta 1$	Running straightness of inner block in horizontal directions $\Delta 2$
Above	Or less		
—	20	0.002	0.004
20	40	0.003	0.006
40	60	0.004	0.008
60	80	0.005	0.010
80	100	0.006	0.012
100	120	0.008	0.016