

1.10. Installation

The structure of the Roller Follower is designed to receive a radial load. If it receives a thrust load, the side plates or the outer ring may be damaged.

It is necessary to minimize a component of thrust force, or prevent it from occurring, when designing the system and installing the Roller Follower.

If an external force is applied to either of the side plates of model NART, it may cause abnormal rotation. Use much care in installing the Roller Follower.