

## 1.1 1. Installation

When installing the Spherical Bearing, pay attention to the mounting orientation so that the slit of the outer ring receives a minimum load. Also note that the Spherical Bearing cannot receive a thrust load alone.